




PORTABLE DIGITAL LCD TELEVISION

TTV702-9


Service manual

一、No sound, no image, blank screen trouble shooting steps:

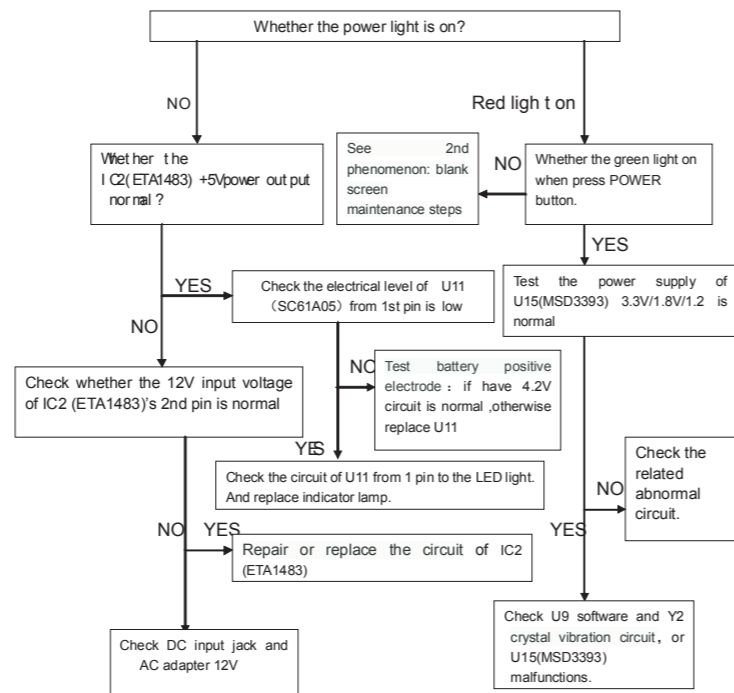


1

二、Blank screen trouble shooting steps:

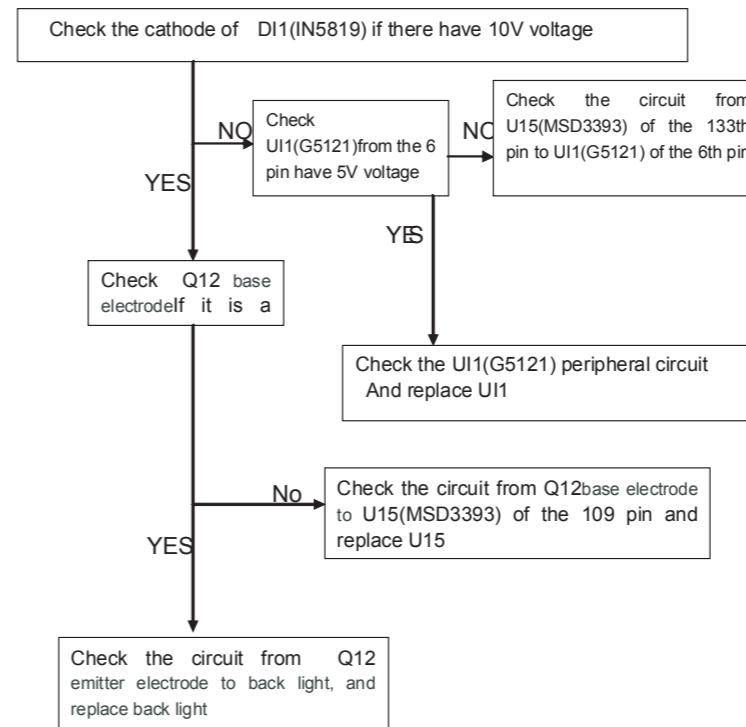


2

三、Has image, no sound/low sound/distortion

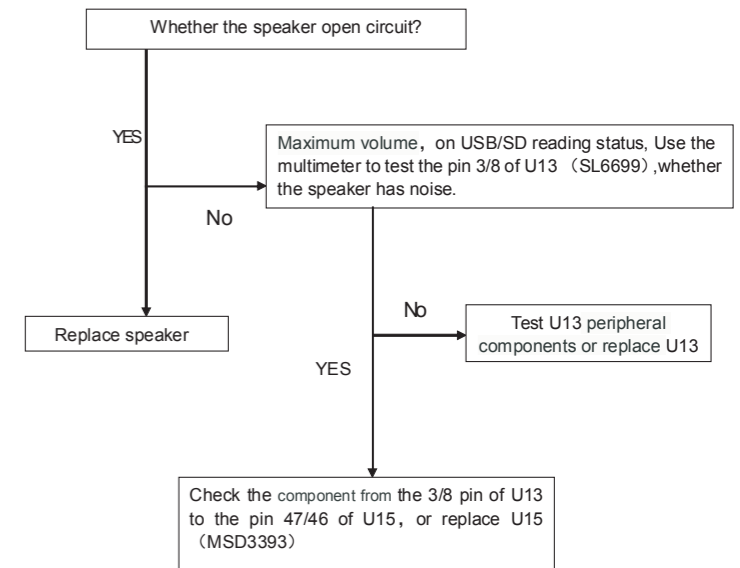


3

四、DTV no signal trouble shooting steps:

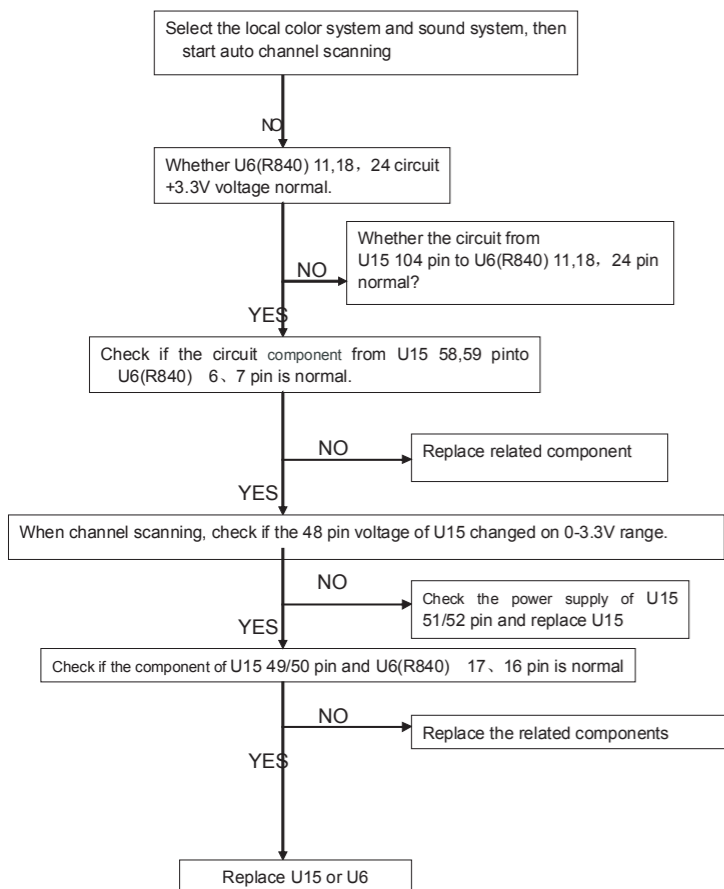


4

五、AV input no image no sound

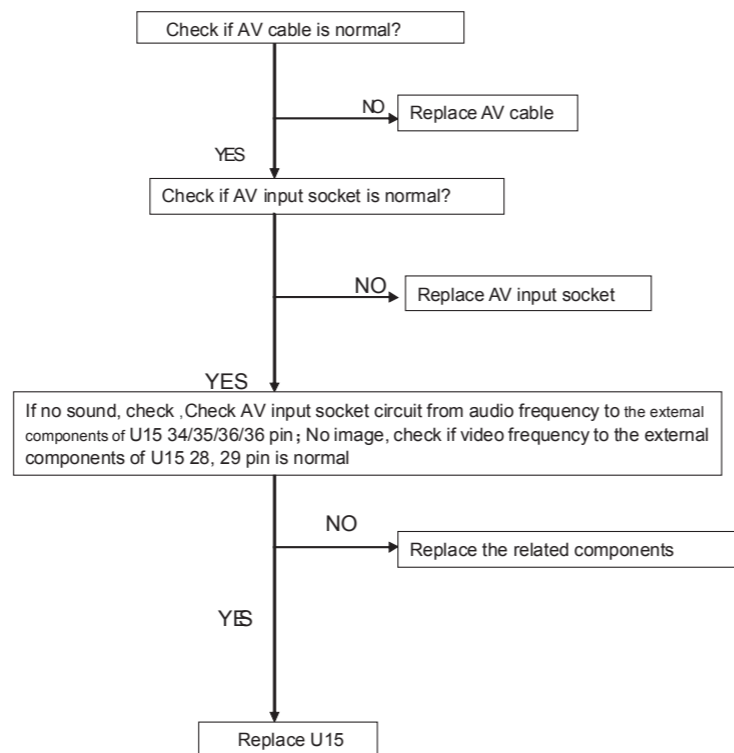


5

六、Snow screen/image not clear

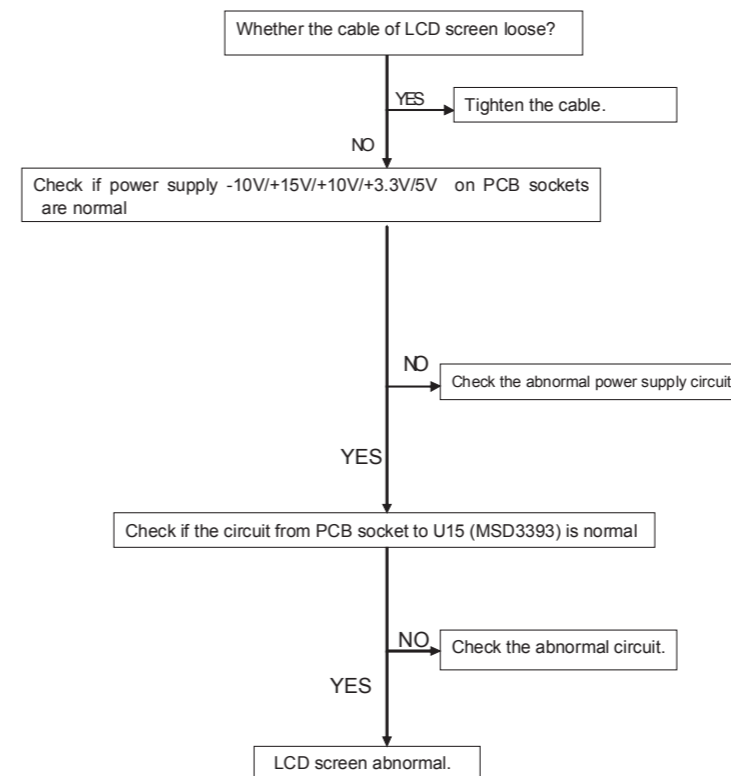


6

七、USB not reading

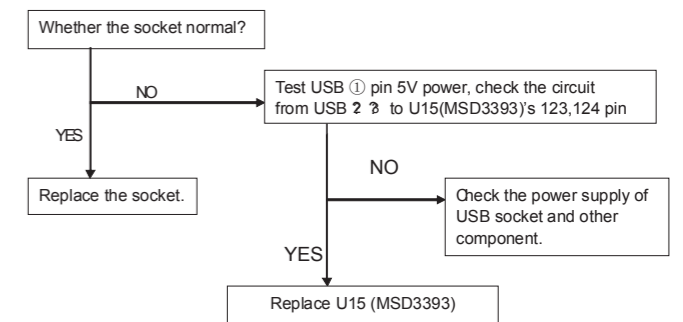


八、SD card not reading

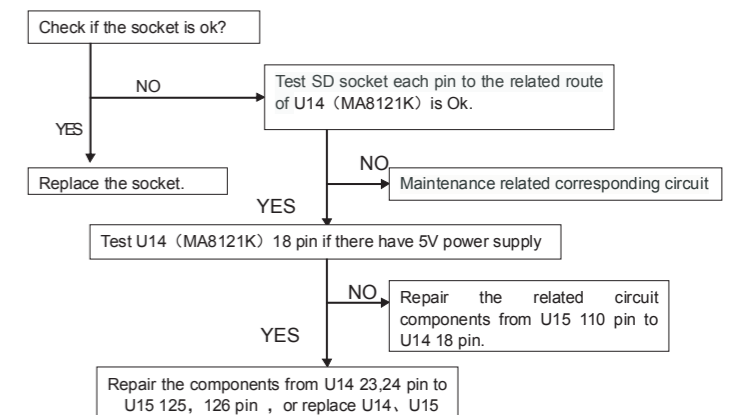


7

九、Button no function

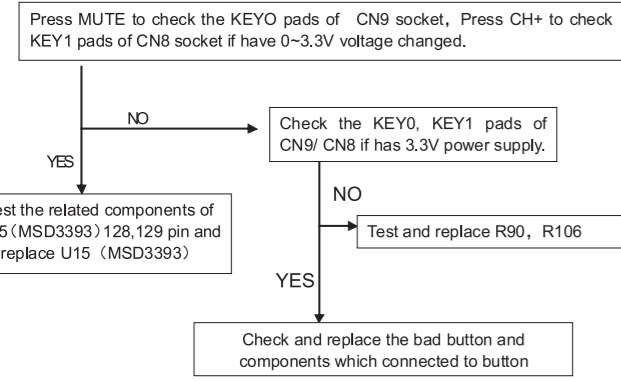

十、Battery can't be charged

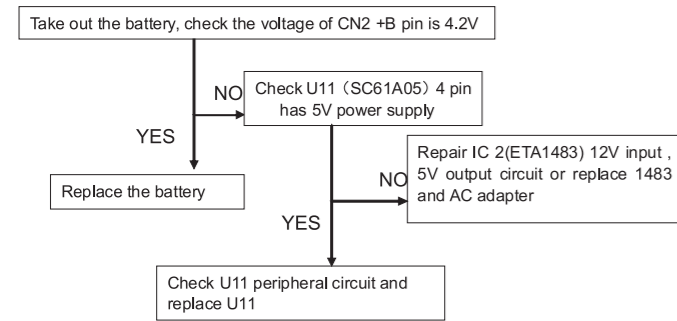

⑧

