




PORTABLE DIGITAL LCD TELEVISION

TTV701-7


Service manual

一、 No sound, no image, blank screen trouble shooting steps:

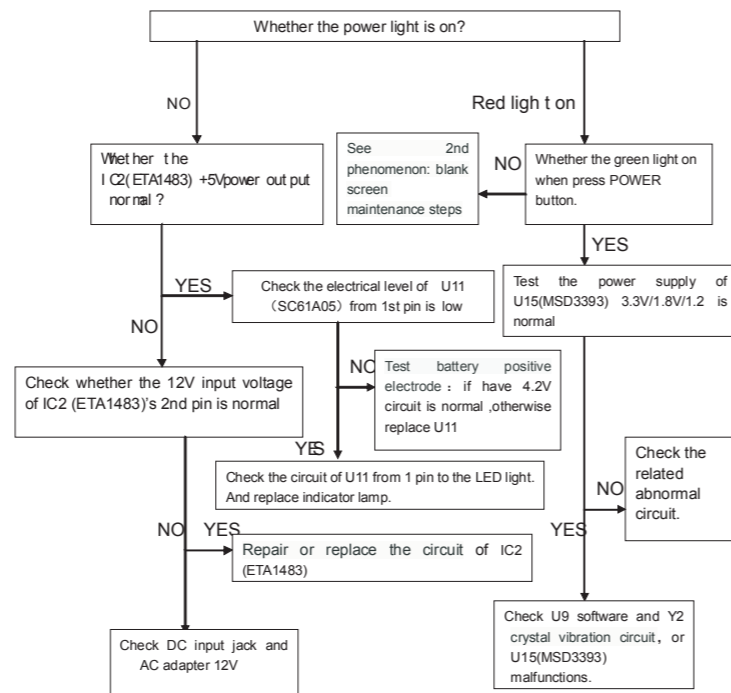


1

二、 Blank screen trouble shooting steps:

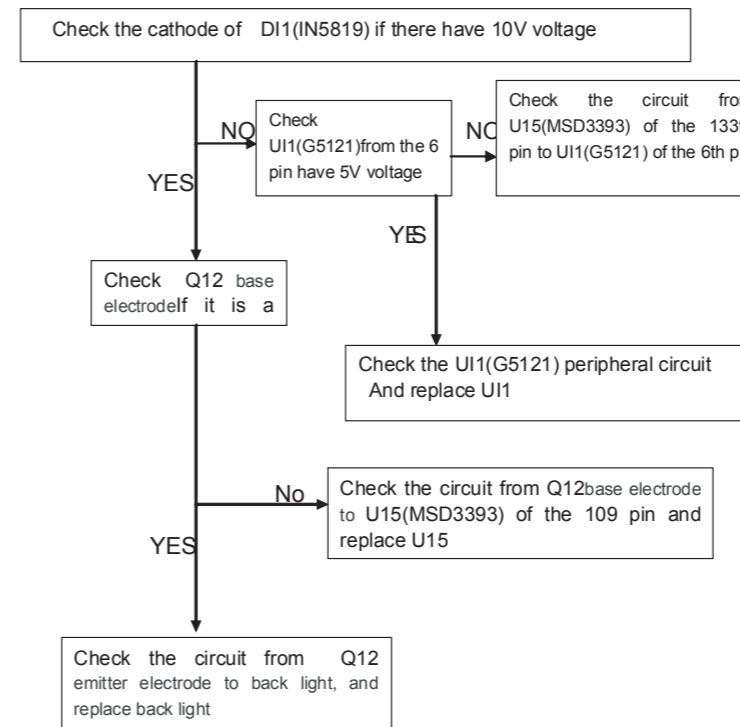


2

三、 Has image, no sound/low sound/distortion

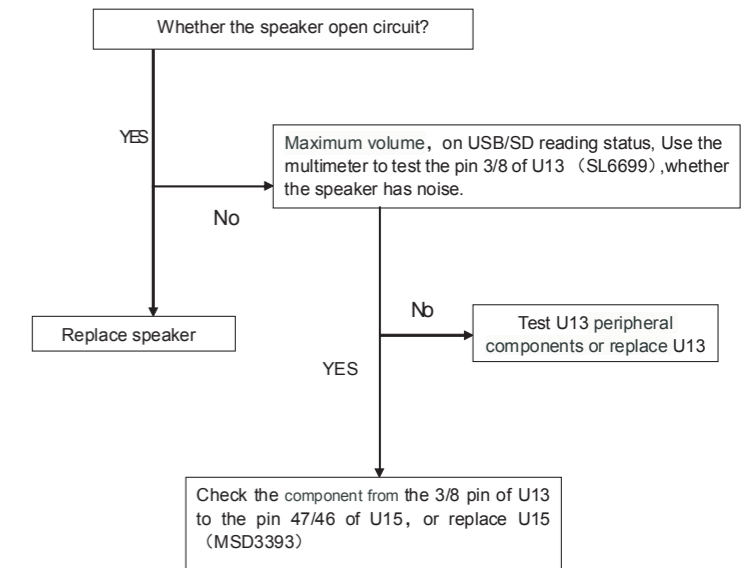


3

四、 DTV no signal trouble shooting steps:

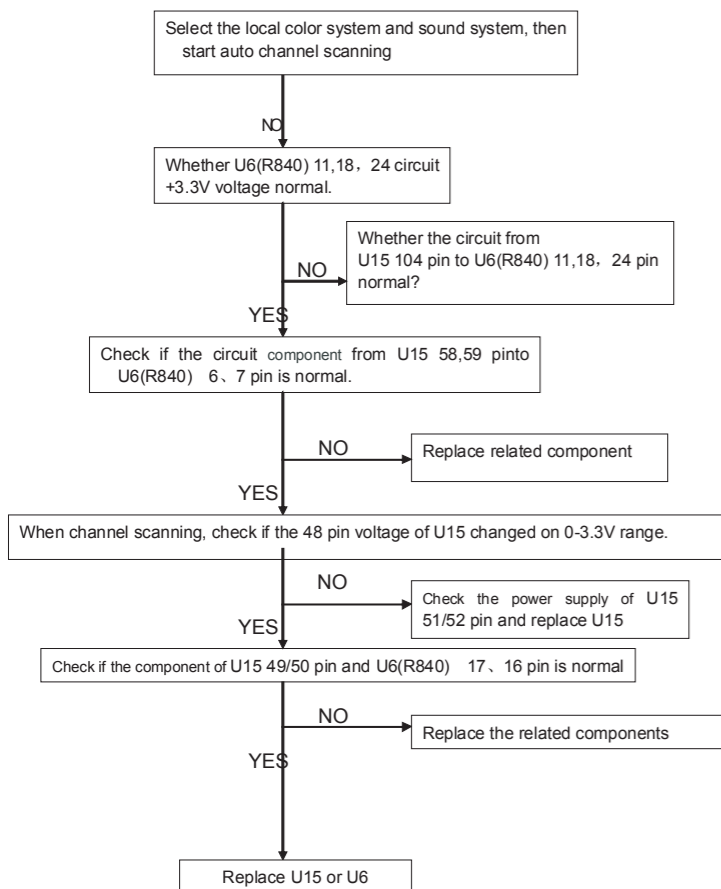


4

五、 AV input no image no sound

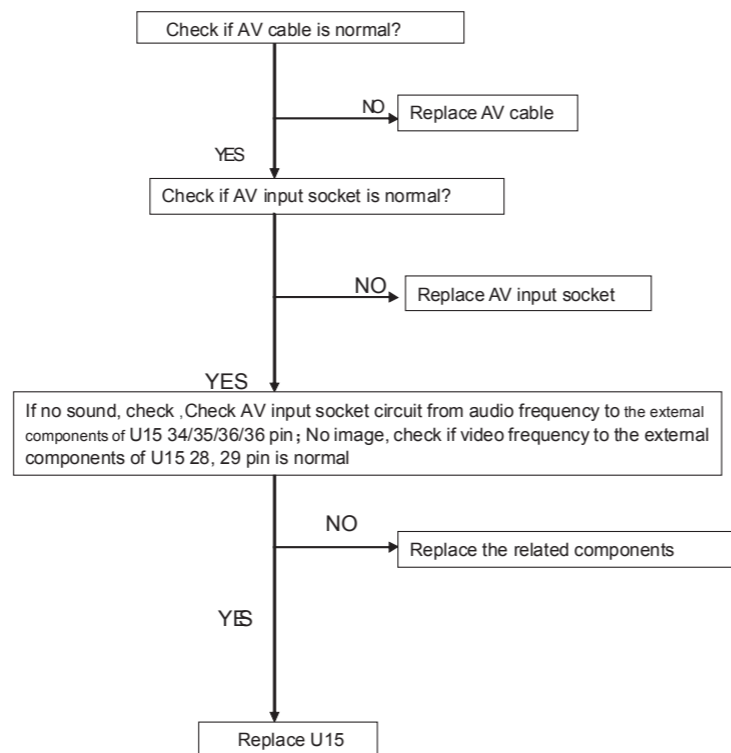


5

六、 Snow screen/image not clear

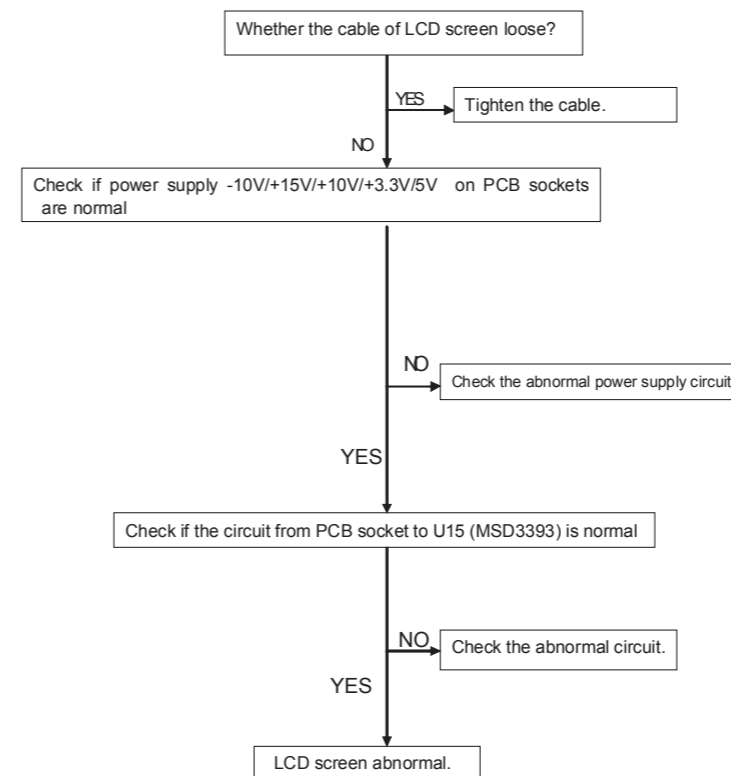


6

七、 USB not reading

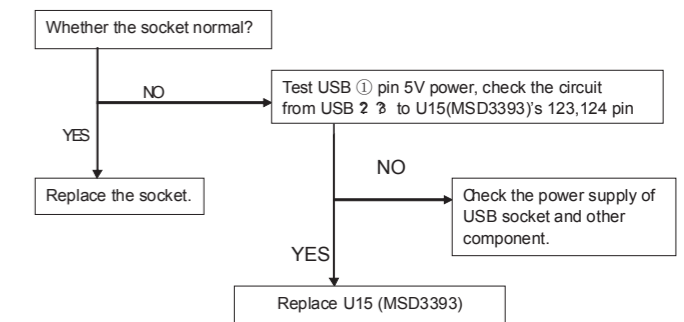


八、 SD card not reading

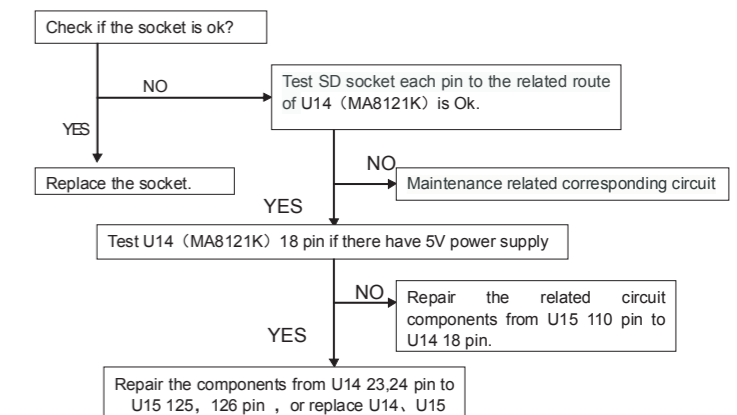

7


九、Button no function

Press MUTE to check the KEY0 pads of CN9 socket, Press CH+ to check KEY1 pads of CN8 socket if have 0~3.3V voltage changed.

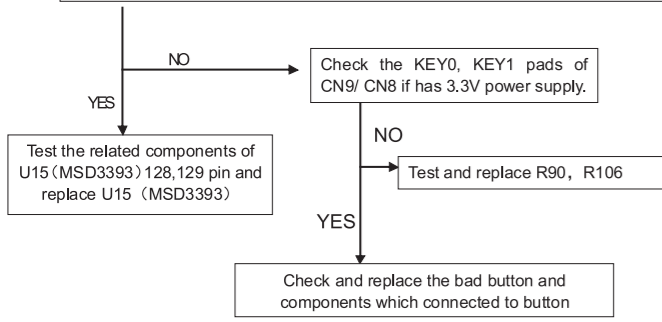

十、Battery can't be charged

Take out the battery, check the voltage of CN2 +B pin is 4.2V

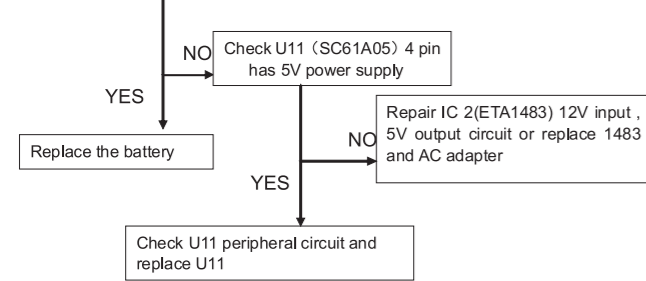

⑧

