

Buttons are numbered from left to right, beginning at the Power button



1. Power
2. Zoom (Picture Size)
3. Freeze (Pause, used during media playback that is not live TV)
4. Mute
- 5-14. Number Keys
15. Channel Split (used to enter channel numbers that are more than 2 Digits)
16. Previous Channel
17. Source (Cycles through the available Input Sources)
18. UP (Used to Navigate Menu)
19. INFO (Displays Current Channel Information)
20. Channel Up
21. LEFT (Used to Navigate Menu)
22. ENTER (Used to confirm selection in Menu and while Manually tuning to a channel using No. Keys)
23. RIGHT (Used to Navigate Menu)
24. Channel Down
25. MENU
26. DOWN (Used to Navigate Menu)
27. EXIT
28. VOL +
29. AUDIO (Cycles through available alternate audio tracks available on current channel)
30. CC (Closed Caption)
31. EPG (Electronic Programming Guide-Brings up the Guide when viewing TV in Cable Mode)
32. VOL -
33. P. Mode (Picture Mode, Cycles through picture modes and auto adjusts brightness, contrast)
34. S. Mode (Sound Mode, Cycles thorough audio modes: Personal, Surround, Mono)
35. CH. List (Brings up a list of currently programmed Channels)
36. FAV list (Brings up your list of Favorite Channels)
37. Play/Pause
38. Stop
39. Rep (Repeat, used when playing back MP3 or other Audio media through USB/SD Card)
40. Sleep (Sets Sleep Timer)
41. Previous Track
42. Next Track
43. Rewind
44. Fast Forward