



PORTABLE DIGITAL LCD TELEVISION

TTV703-10



Operating Guide

1



The lightning flash and arrowhead in the triangle is a warning sign alerting you of "dangerous voltage".

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: To reduce the risk of electrical shock, do not open product casing. There are no user-serviceable parts inside. Refer servicing to a qualified service professional.



The exclamation point in the triangle is a warning sign alerting you of important operating instructions.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

This product should not be exposed to dripping or splashing. No objects filled with liquids (vases, cups, etc.) should be placed on or near this product.

CAUTION (GROUNDING OR POLARIZATION): The wider blade of the AC plug must match the slot in the "wall socket" receptacle to ensure proper electrical grounding.

CAUTION: Batteries and the battery compartment should not be exposed to excessive heat, such as sunshine or fire.

WARNING: There is a danger of explosion if batteries are incorrectly placed. Replace batteries only with the same or equivalent type.

NOTE: Under the influence of electrostatic phenomenon, this product may malfunction and cause the power to reset.

NOTE: Caution symbols are printed on the bottom of the product. Please refer to the instruction manual for more information.


2

NOTICE

Bright spots or dark spots may appear on the screen. This is a normal phenomenon associated with the active matrix display technology and is not a sign of malfunction. To troubleshoot, please power off and turn back on. If the problem persists, please contact Tyler customer service.

Connecting the power supply:

Align the power supply plug on AC adapter with the input on the back of the display, marked DC.

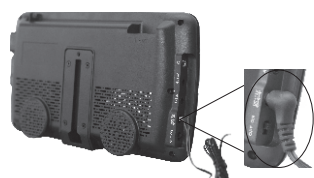

Connecting the Antenna Cable:

Plug one end of the antenna cable into the TV (as shown) and the other end to the external antenna.



Connecting External AV Devices:


Connect AV connectors from the external device to the included converter, paying special attention to the colors of the connections. Then, plug the converter end to the display.



3

FUNCTION MAP

1. Telescopic Antenna
2. MUTE Button
3. EXIT Button
4. OK/CONFIRM Button
5. MODE SELECT Button
6. STANDBY Button
7. CHG: When using internal battery as a power source, this is the charge indicator light. It illuminates when connected to charger (battery is charging). The light will go off when the battery is fully charged.
8. CHANNEL UP Button
9. CHANNEL DOWN Button
10. MENU Button
11. VOLUME UP/RIGHT Button
12. VOLUME DOWN/LEFT Button
13. Remote Sensor
14. LCD Screen
15. Antenna Input Jack
16. Power Button
17. AV Input 1 Jack
18. AV Input 2 Jack
19. Headphone Jack
20. DC Input Jack
21. SD/MMC Card Input
22. USB Input
23. Internal Speaker

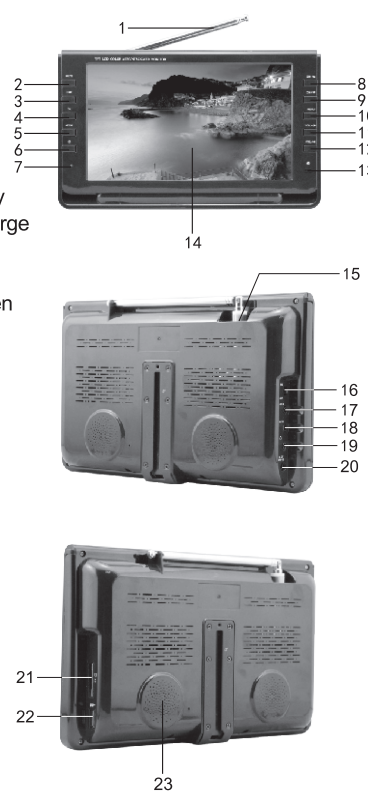

4

PROGRAMMING AUTO-SCAN

As part of the initial setup of this product, we suggest that you auto-scan for local television frequencies, using the setup menu.

1. Press the menu key to enter the function menu on the device.
 2. Press the right button to enter the menu list.
 3. Use the up/down buttons to enter the sub-list.
 4. Choose 'Air/Cable' to enter the frequency search menu.
 5. Press 'right' button to autosearch channels and save them as favorites.
 6. Press OK to confirm selections.
- You may also choose to show/hide channels after locating active channels.

PICTURE SETTINGS

There are four picture modes, which can be selected through the menu.

1. Press the menu key to enter the function menu on the device.
2. Press the right button to enter the menu list.
3. Use the up/down buttons to enter the sub-list.
4. Use the left/right buttons to adjust the numerical value in any of the sub-list menus.
5. Press the MENU button to confirm your selection, and return to the previous menu.
6. Press MENU again or press the EXIT button on the remote control to exit the menu.

SOUND SETTINGS

There are four sound modes, which can be selected through the menu.

1. Press the menu key to enter the function menu on the device.
2. Press the right button to enter the menu list.
3. Use the up/down buttons to enter the sub-list.
4. Use the left/right buttons to adjust the numerical value in any of the sub-list menus.
5. Press the MENU button to confirm your selection, and return to the previous menu.
6. Press MENU again or press the EXIT button on the remote control to exit the menu.

5

TECHNICAL PARAMETERS

ATSC Frequency: 54MHz~803MHz
 NTSC Receiver Frequency: 55.25MHz~801.25MHz
 Screen Size: 10" Diagonal
 Resolution: 1680x1050
 Screen Scale: 16:9
 Power Supply: AC Input: 100~240V 50/60Hz; DC OUTPUT 12V; 800mA Internal Battery
 Net Weight: 490g
 Power Consumption: 10W
 Media Support:
 Video: MPG2, MPG2 HD, MPG4, MPG4 HD, H.264, FLV, MVC, DD
 Audio: MP3 Photo: JPG

IMPORTANT NOTE:
 Please take care to use only English characters and numerals when naming your .MP3 files. Characters such as "_" (underscore) and " " (space) may result in files being unreadable or inconsistently recognizable by the device.

IMPORTANT NOTE:
 Although this product is fully compatible with USB 1. and 2.0 standards, a small percentage (about 5%) of USB Flash devices may not be readable, as not all Flash devices are fully compliant with USB official standards.

REMOVAL OF USB DRIVES/SD CARDS:
 NEVER remove (or unplug) USB devices or SD cards from the device during playback. Always press the STOP button before removing the card/device to avoid corrupting the audio files or Flash device.

IMPORTANT:
 This unit DOES NOT support the connection or use of MP3 players through the USB port, due to their lack of software compatibility. Only USB "Flash" devices can be used for audio playback through the USB port.

6

SAFETY INSTRUCTIONS

READ INSTRUCTIONS: Read all safety and operating instructions prior to use.
RETAIN INSTRUCTIONS: The safety and operating instructions should be saved for future reference.
FOLLOW INSTRUCTIONS: All operating and safety instructions should be followed.
CLEANING: Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a dry cloth to clean.
WATER AND MOISTURE: To avoid electrocution risk, do not use this product near water.
STABILITY: Do not place this product on an unstable cart, stand, bracket or table. The product may fall, causing serious injury to a child or adult, and/or may damage product.
VENTILATION: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to avoid overheating. Do not block vents.
POWER SOURCES: This product should be operated only using the type of power source indicated on the marking label. If you are not sure of the voltage of your power supply, consult your power company or product dealer. For products intended to operate using battery power, consult the operating instructions.
GROUNDING OR POLARIZATION: If this product is equipped with a polarized alternating-current line plug (a plug having one blade that is wider than the other), the plug will only fit into the power outlet one way. This is a safety feature. If you are unable fully insert the plug into the power outlet, try reversing the plug. If this product is equipped with a three-wire grounding-type plug (a plug with a third [grounding] pin), this plug will only fit into a grounding-type outlet. If you are unable to insert the plug, contact your electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
POWER CORD PROTECTION: Power supply cords should be routed so that they are not likely to be walked on, tripped over, or pinched by items placed on or against them, and paying particular attention to the points where the cord meets the wall plug and where the cord leaves the product.
OVERLOAD PROTECTION: This product is equipped with an attachment plug with overload protection. This is a safety feature. See the instruction manual for replacement or resetting of protective device. If replacement of the plug is necessary, be sure that the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
ADDED POWER PROTECTION: For added protection during a lightning storm or when product is left unused and unattended for some time, be sure to unplug product from wall outlet.
PRODUCT SERVICE: Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all service to a qualified technician.

7

LIMITED WARRANTY

Tyler provides a **Limited Warranty of ONE YEAR** for all of its products. Tyler warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship originating from the manufacturer. Tyler agrees, at its discretion during the warranty period, to repair or replace the product if it is determined to be defective at "no charge". This warranty does not cover cosmetic damage, antennas, AC cords, damage due to power surges, connection to improper voltage supplies, damage caused by leaking batteries, misuse, mishandling, improper application, acts of God, or attempted repair by an unauthorized service agent.

Products are sold for personal, non-commercial use only. Product is not warranted for commercial or rental use.

In order to have your merchandise repaired or replaced under warranty, you must contact Tyler's customer service department at the number or email address below **within the warranty period**. The customer service department will provide you with an RMA number (return authorization code) and the street address for product service/returns. With the product, **you must include the following:**

1. **Proof of purchase**, which must have a purchase date which falls within the warranty period specified in the product manual.
2. **All of the accessories that came in the package**, as well as the main unit.
3. **A detailed description of the problem you are having with the product.**
4. All returns must have an **RMA Number** (an RMA number can be obtained by contacting customer service).

The product must be sent in the original packaging, or a reasonable substitute, to prevent damage. You must include your full name, shipping address, and telephone number for order reference. No return will ship back to a PO Box.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. TYLER SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

The warranty period of a repaired or replaced unit will be the balance of the original purchase date.

TYLER CUSTOMER SERVICE
 18375 Ventura Boulevard #323
 Tarzana CA 91356

support@tyler-products.com

8